

VI.3.3B-SETOPT PROGRAM PPINIT COMMAND SETOPT

Purpose

Command SETOPT is used to set run options.

Format

@SETOPT

$\left[ \begin{array}{c} \text{NEWPAGE (YES } \circ) \\ \text{NO} \end{array} \right] \quad \left[ \begin{array}{c} \text{PLOT (YES } \circ) \\ \text{NO} \end{array} \right] \quad \left[ \begin{array}{c} \text{CONDCODE (} \circ \\ \text{condcode} \end{array} \right]$

$\left[ \begin{array}{c} \text{PAGESIZE (} \circ \\ \text{pagesize} \end{array} \right] \quad \left[ \begin{array}{c} \text{TITLE (YES } \circ) \\ \text{NO} \\ \text{PAGE} \end{array} \right]$

$\left[ \begin{array}{c} \text{UNITS (ENGL } \circ) \\ \text{METR} \end{array} \right] \quad \left[ \begin{array}{c} \text{RUNCHECK (YES } \circ) \\ \text{NO} \end{array} \right] \quad \left[ \begin{array}{c} \text{OVERPRNT (YES } \circ) \\ \text{NO} \end{array} \right]$

$\left[ \begin{array}{c} \text{SAVEDFLT (YES } \circ) \\ \text{NO} \end{array} \right] \quad \left[ \begin{array}{c} \text{MSGLEVEL (} \circ) \\ \text{1} \end{array} \right]$

$\left[ \begin{array}{c} \text{RUNNTWK (YES } \circ) \\ \text{NO} \end{array} \right] \quad \left[ \begin{array}{c} \text{RUNORDR (YES } \circ) \\ \text{NO} \end{array} \right]$

Parameter Description

<u>Parameter</u>	<u>Required/ Optional</u>	<u>Maximum Characters</u>	<u>Description</u>
NEWPAGE	0		Option to print each command starting on a new page
PLOT	0		Option to plot parametric data if basin boundary referenced when an MAP or MAT area is defined or redefined
condcode	0	2	Condition code above which execution of commands will stop

<u>Parameter</u>	<u>Required/ Optional</u>	<u>Maximum Characters</u>	<u>Description</u>
pagesize	0	2	Maximum number of lines to be printed per page (default is 80, maximum is 80, minimum is 50)
TITLE	0		Option to print title line on printed output - only the page number is printed if PAGE specified
UNITS	0	4	Default units to be used when not otherwise specified
RUNCHECK	0	3	Option to check input data but do not write to any data bases - currently valid only for DEFINE AREA, BASIN, STATION and USER
OVERPRNT	0	3	Option to control overprinting of ERROR and WARNING messages
SAVEDFLT	0	3	Save user run defaults for the following run options: NEWPAGE NOGOESCK OVERPRNT PAGESIZE
MSGLEVEL	0	1	Option to control the amount of printout from commands <u>1</u> /
RUNNTWK	0	1	Option to control running of the NETWORK command at end of run if any NTWK indicators were set
RUNORDR	0	1	Option to control running of the ORDER command at end of run if the ORDER indicator was set

Notes:

1/ If MSGLEVEL(1) is specified before the NETWORK command is run, the following will not be printed:

- o messages that PCPN, TEMP, MAP, MAPS and MAT parameters were successfully updated
- o messages that MAP and MAT time series headers were successfully updated